




AC In-Wall




1x

a

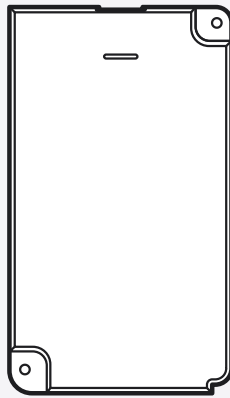

1x

b

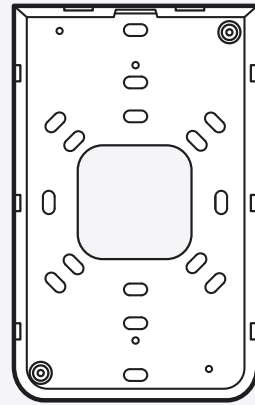

1x

c

6#-32T



4x

d



M3



2x

e



M3



2x

f



M2.6



1x

g



M2.6




1x

h

T8



1

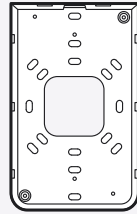

1x


c


6#-32T




4x

d

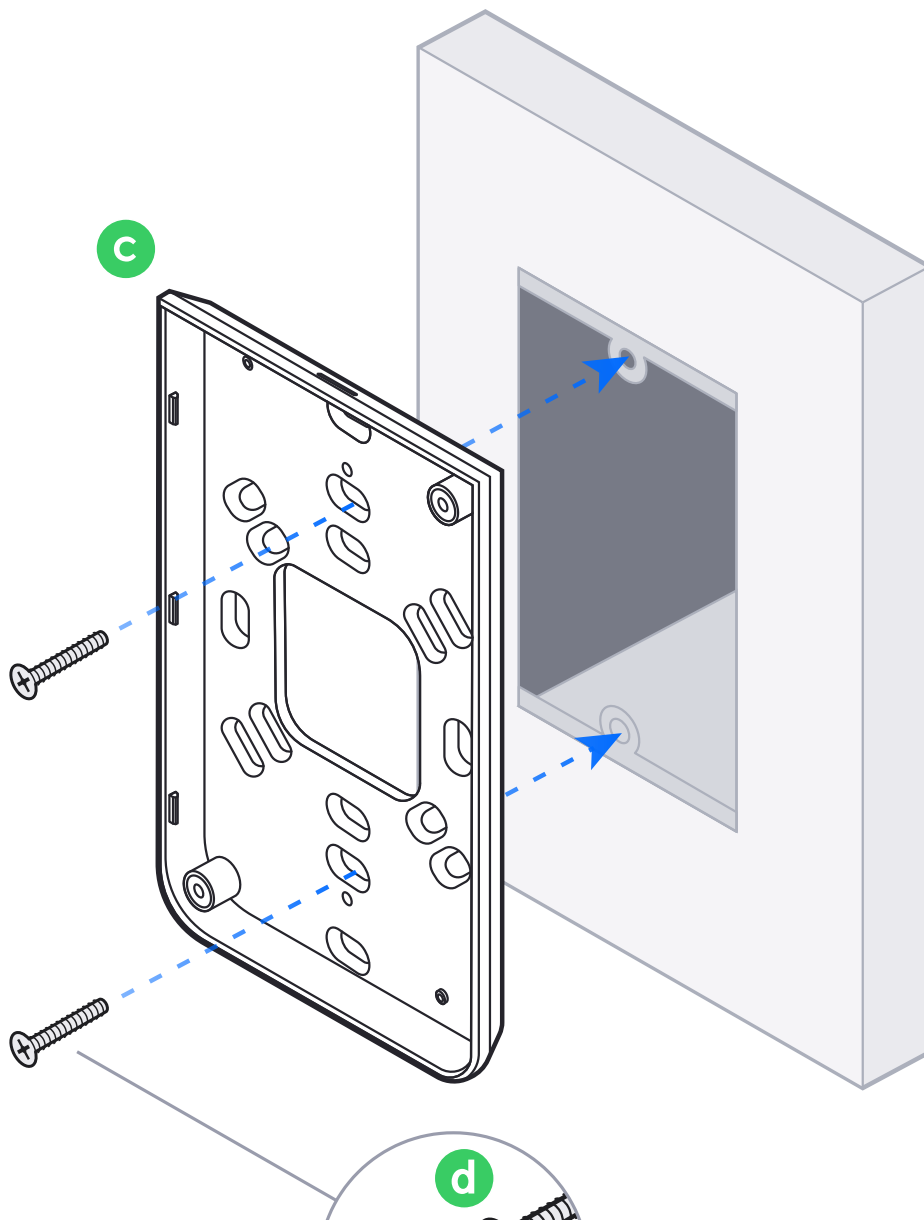

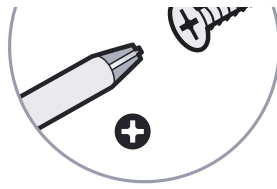



2

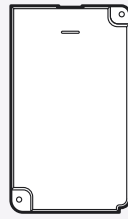

1x

b

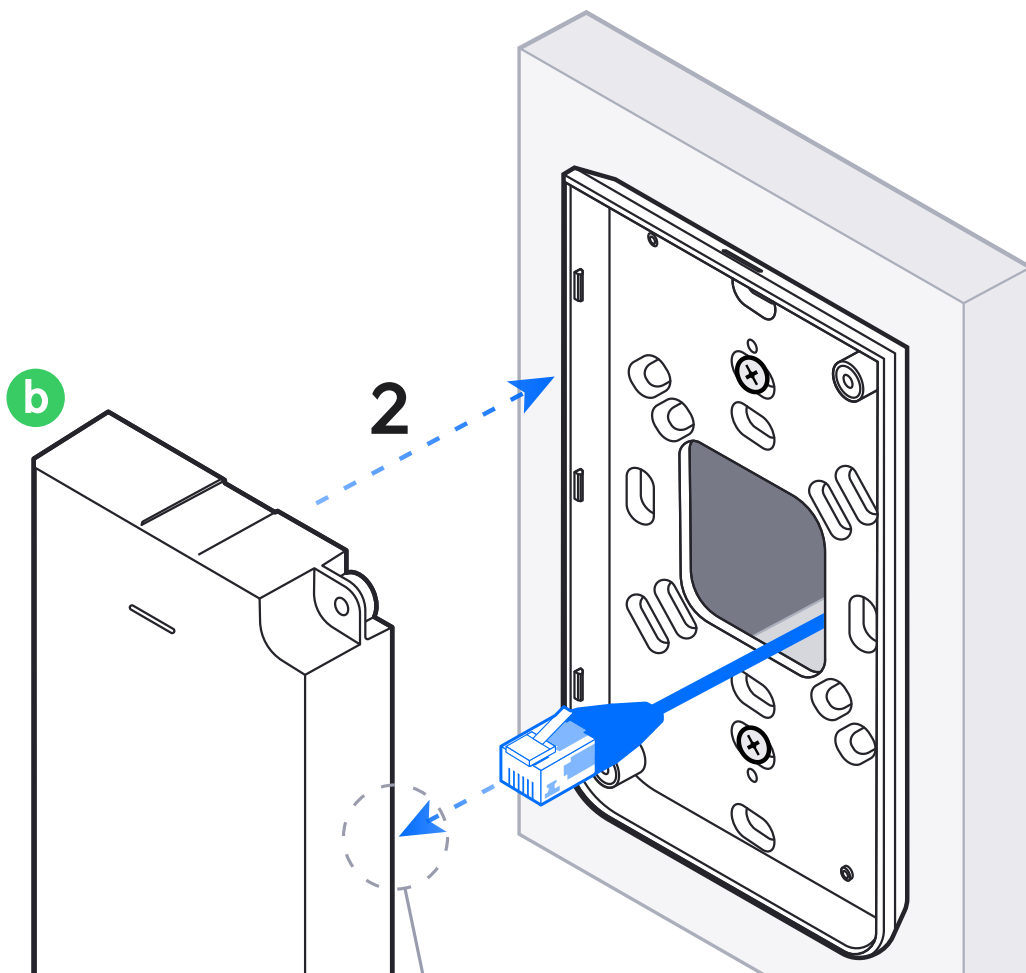

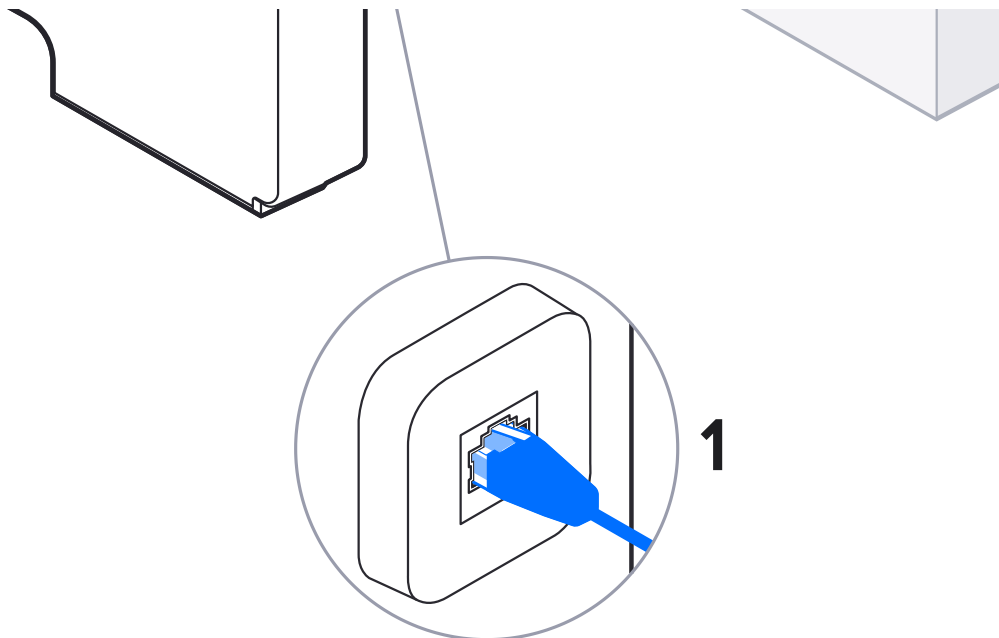

3



M3



2x

e







M3



2x

f

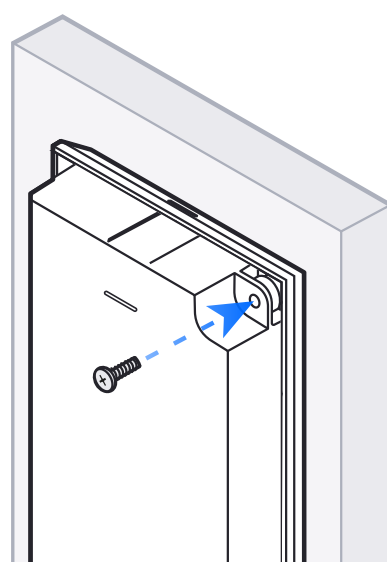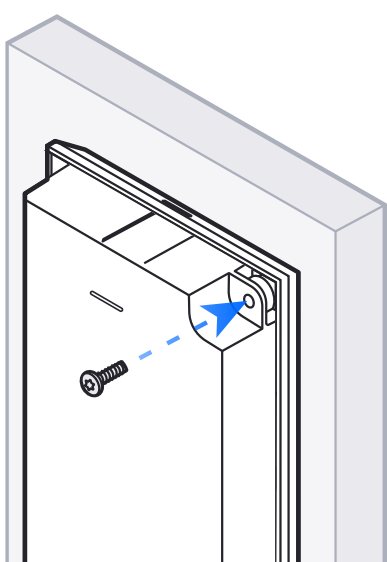

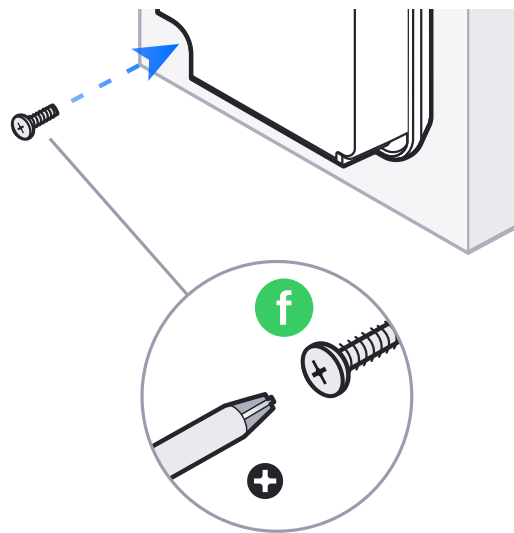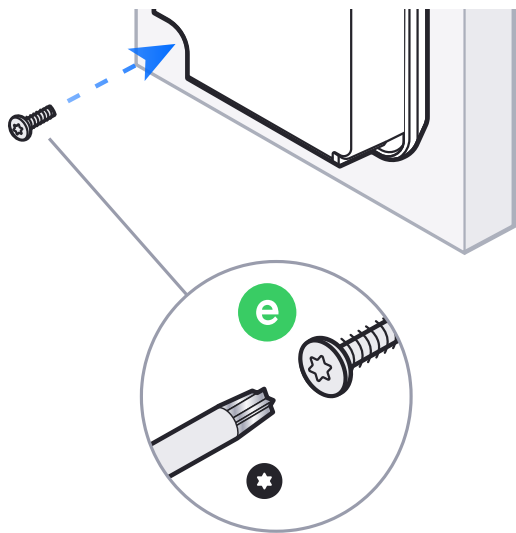



4



1x

a

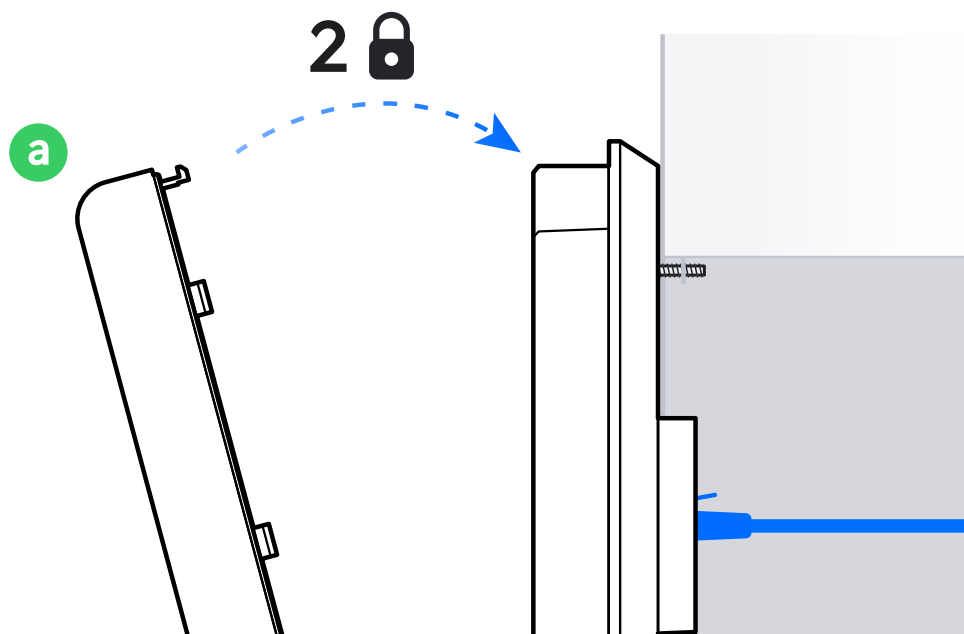

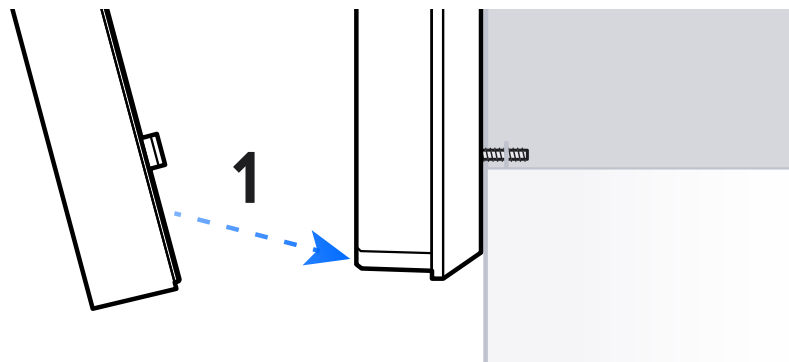

5



M2.6





1x




M2.6



1x

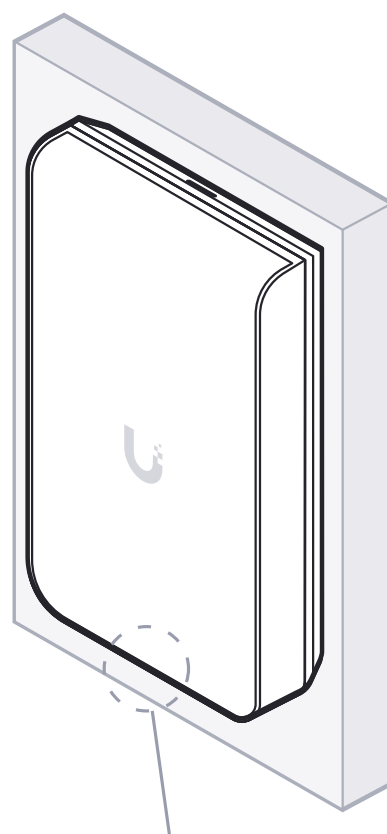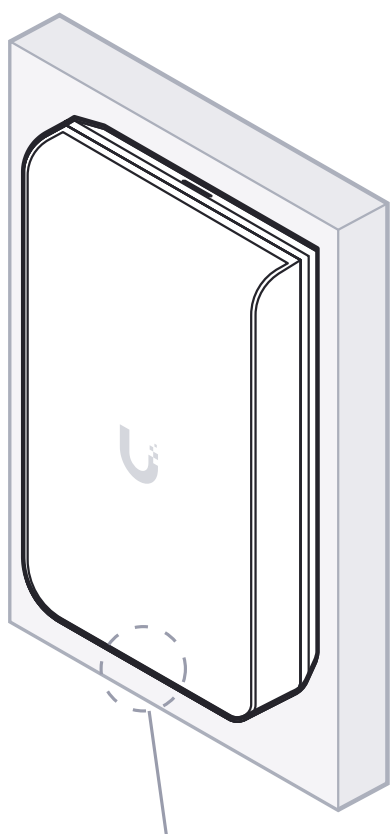

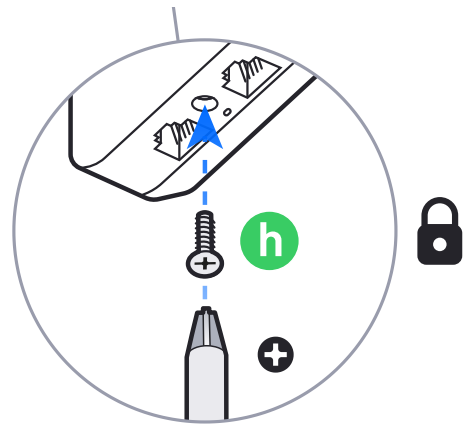

6

A



Internet



B




Internet



UniFi Gateway
Console




**UniFi Gateway
Console**

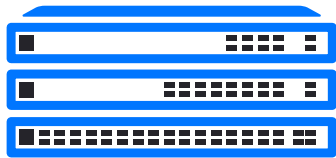

Switch




PoE

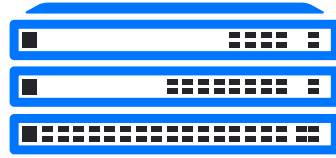


Switch




**UniFi
Access Point**

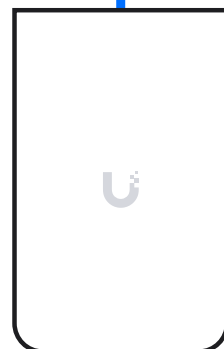


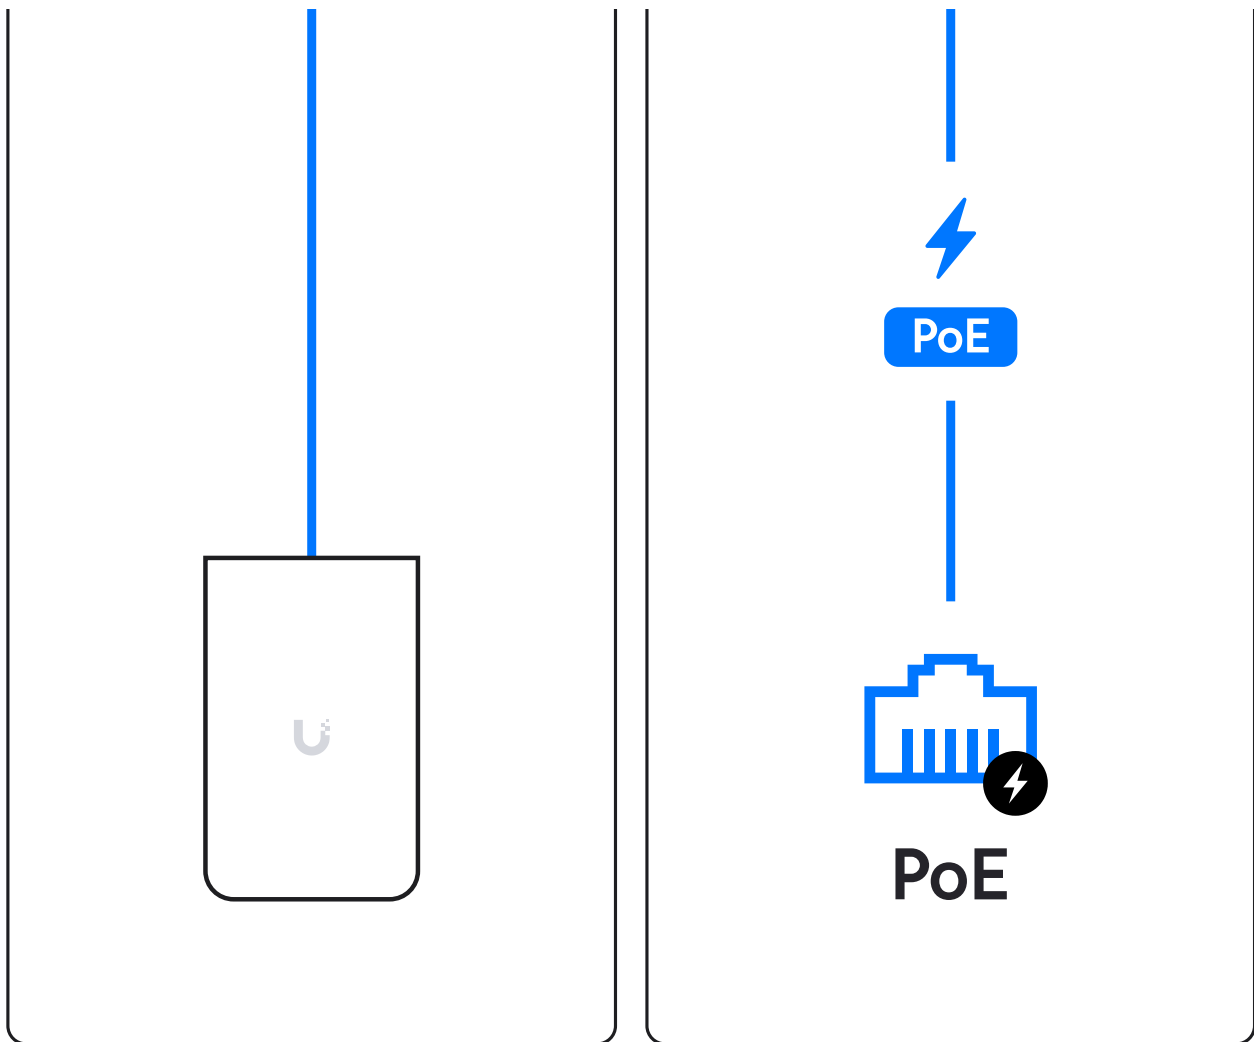





7

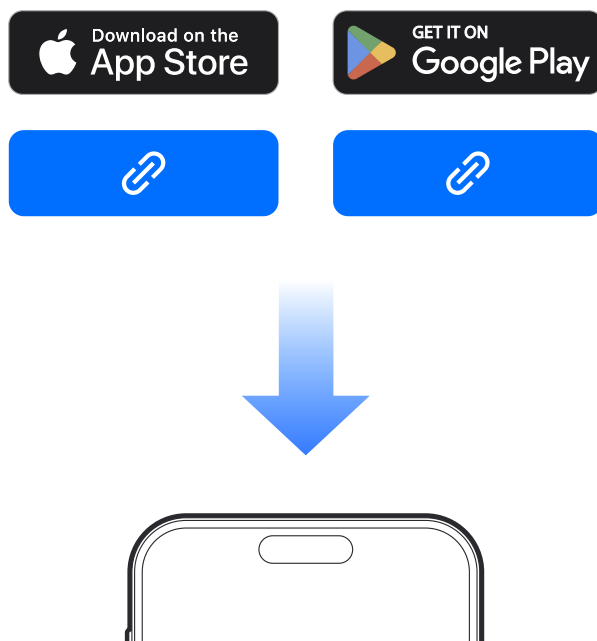





1

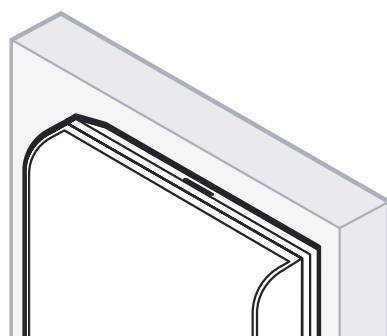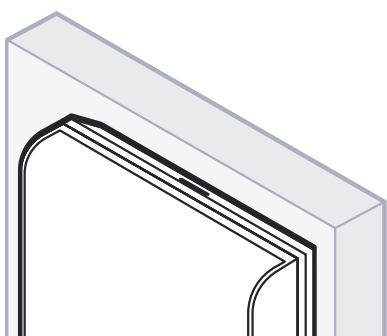

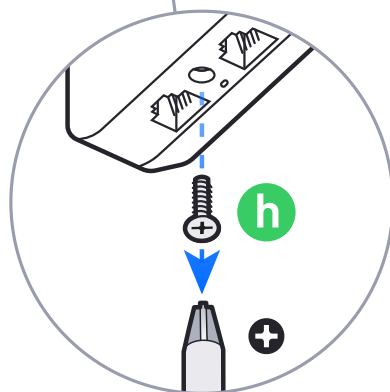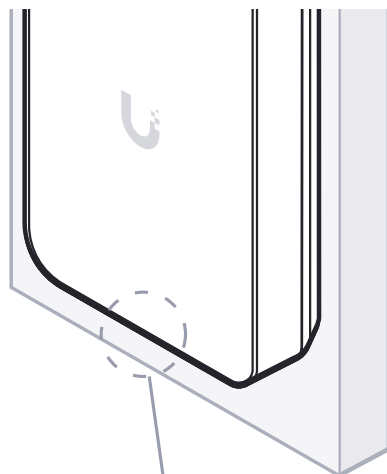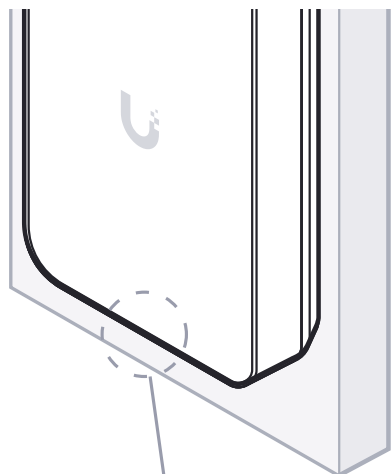

2

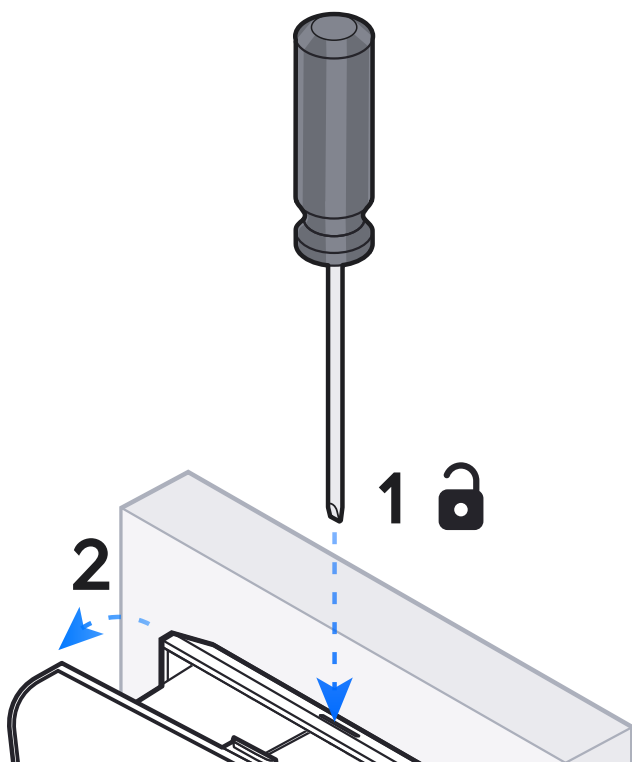

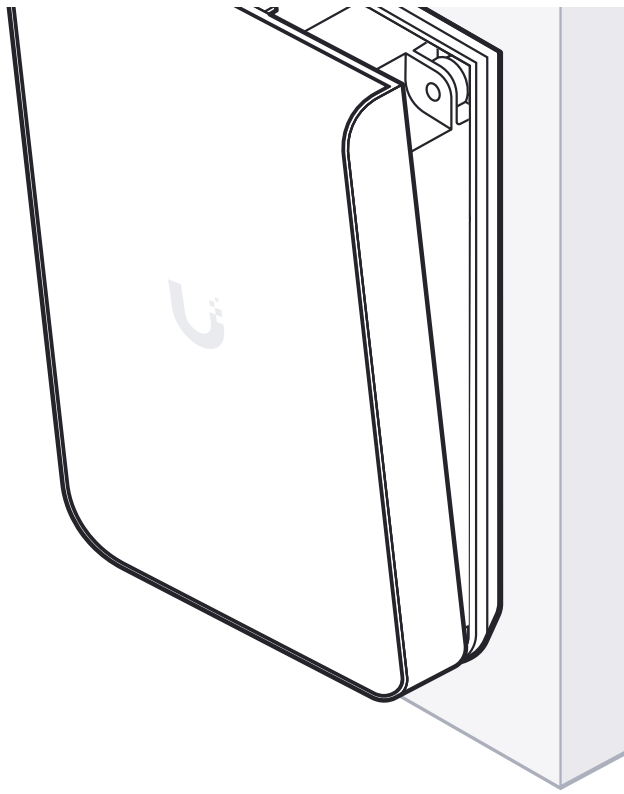

If you need further assistance, visit our [Help Center](#) or contact [Ubiquiti Support](#).